
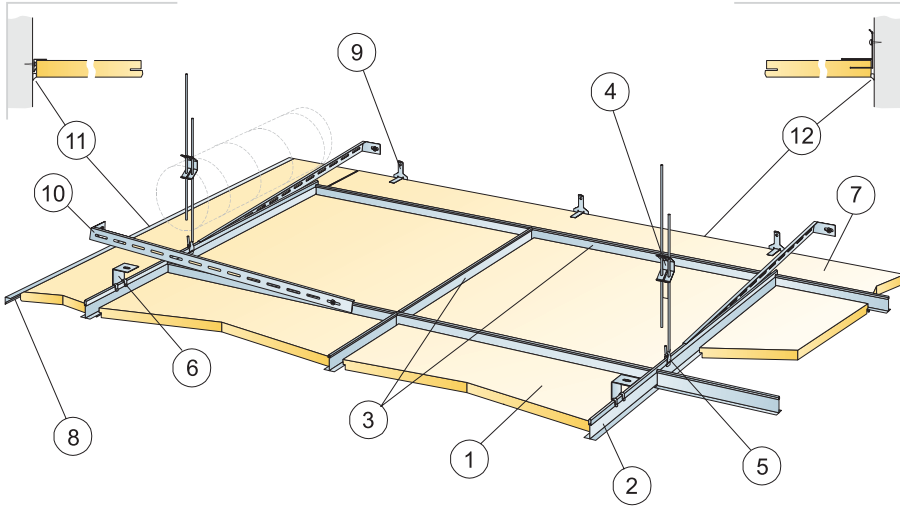


Focus frieze

2400x600, 24"x96"

M110

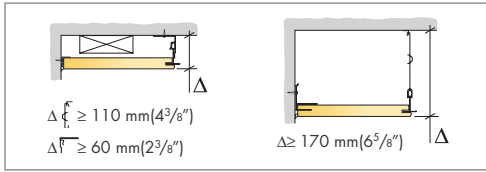

1. Focus/Master A or E

2. Connect T24 Main runner

3. Connect T24 Cross tees

4. Connect Adjustable hanger

5. Connect Hanger clip 1285

6. Connect Direct bracket






7. Focus frieze 2400x600/24"x96"

8. Connect Frieze trim 0562

9. Connect Frieze bracket 0043

10. Connect Wall bracket
Space bar 0525

11,12. Connect sealant 0046





M=100-600(4-24")
N=100-600(4-24")

600(24")

2400(94")

$M, N \leq 300(12")$
 $M, N \leq 300(12")$


1

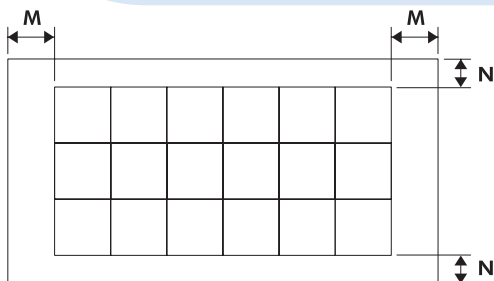



600(24")

2400(94")




$M, N > 300(12")$

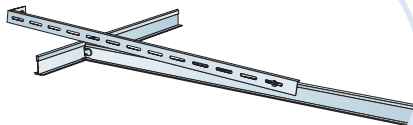

2






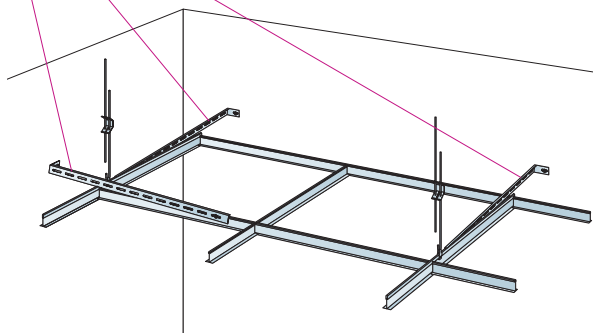





3

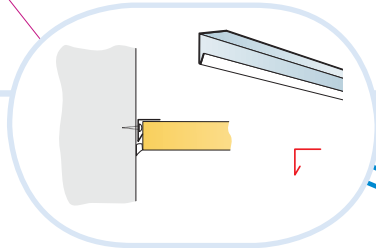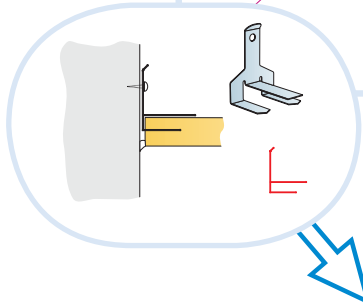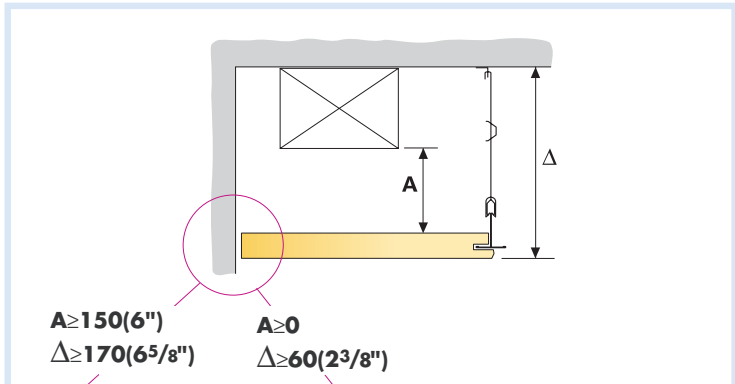






8

4

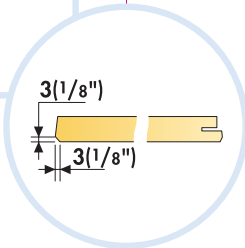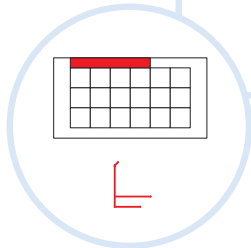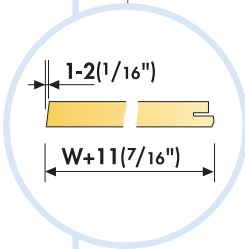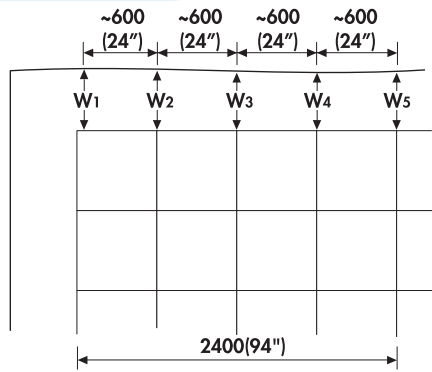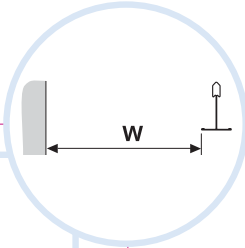
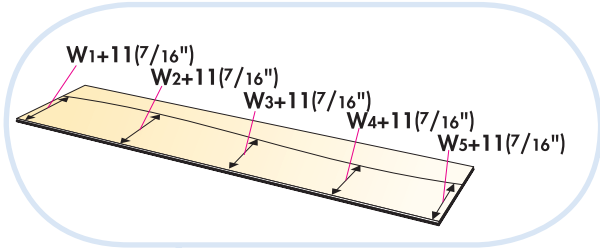


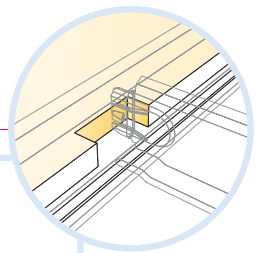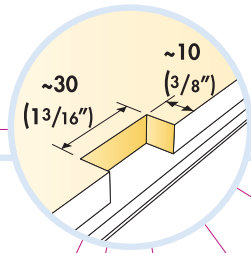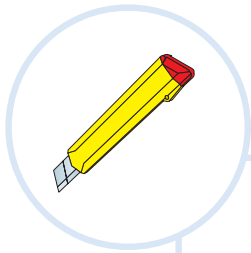



5

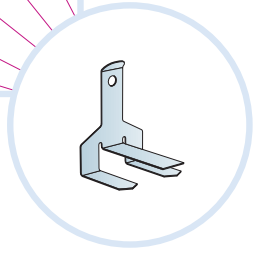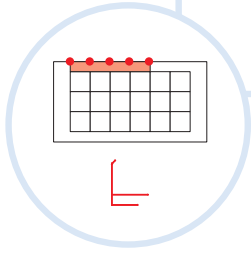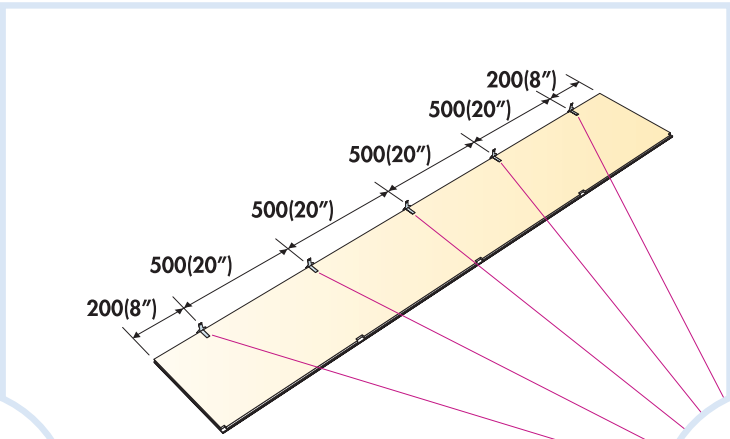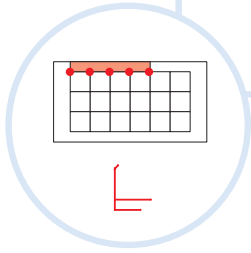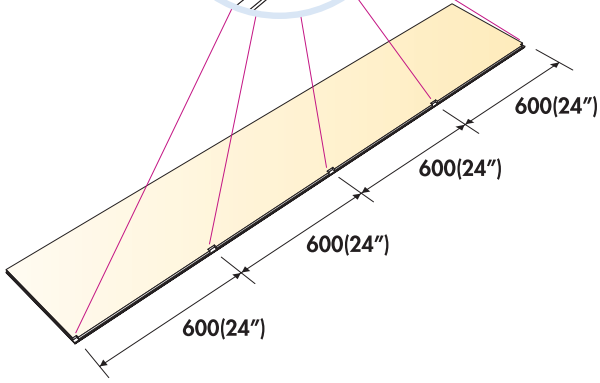

6

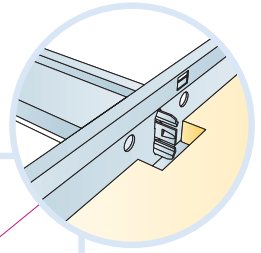
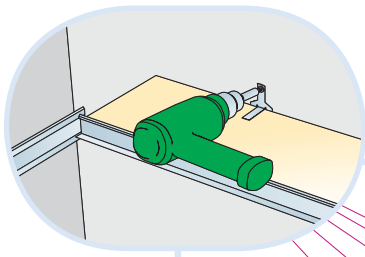


7

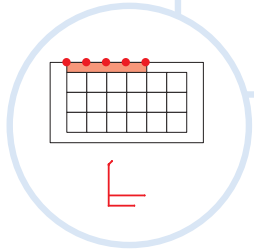
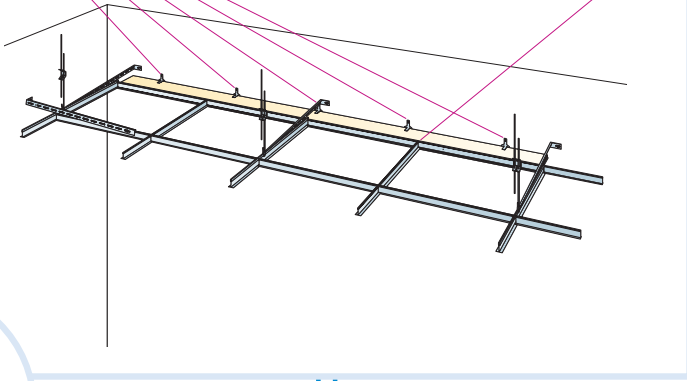


12


C300(12")

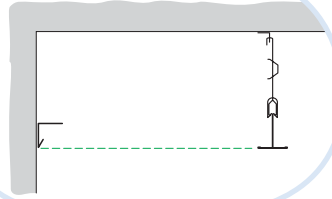



8

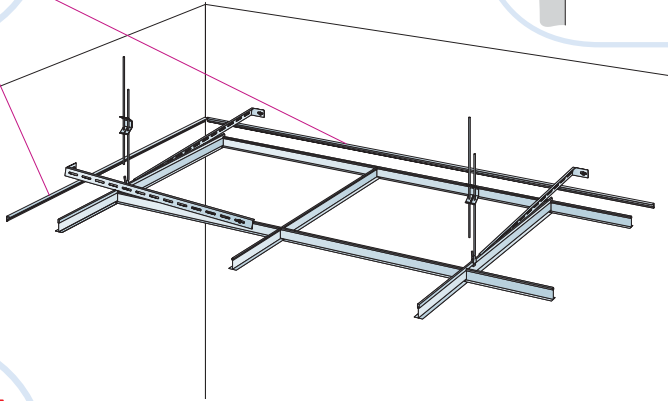





$W_1 - W_5 + 13(1/2")$



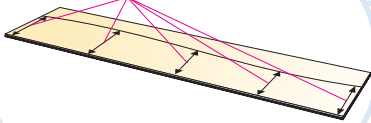


$W_1 - W_{14} + 13(1/2")$




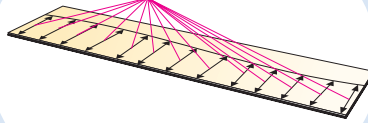


9


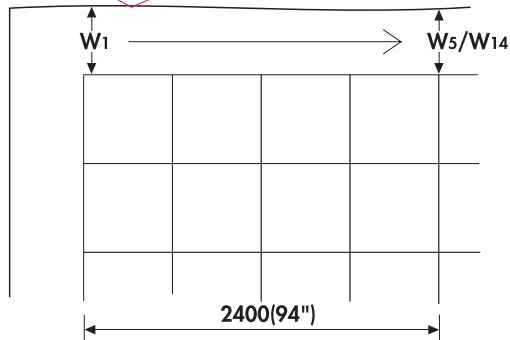


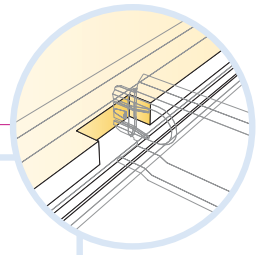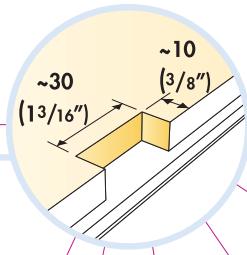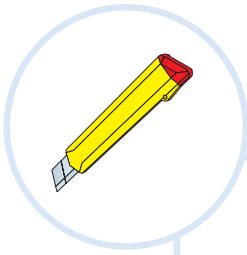




10

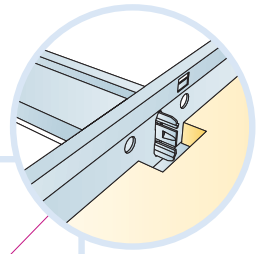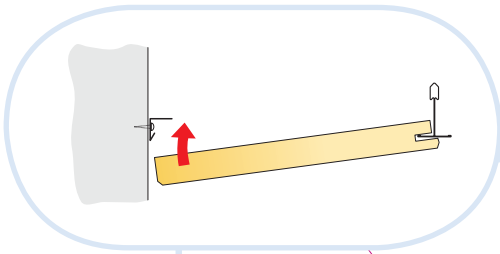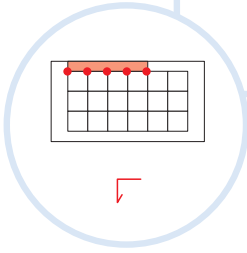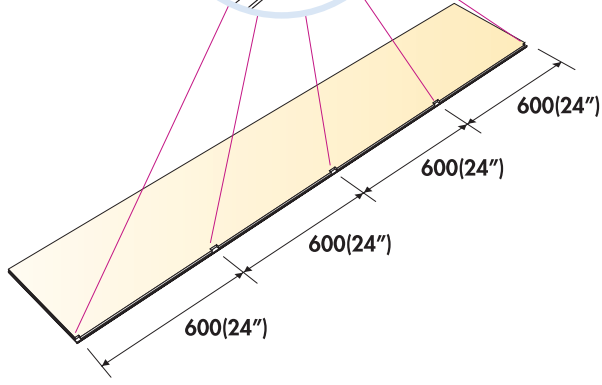




11

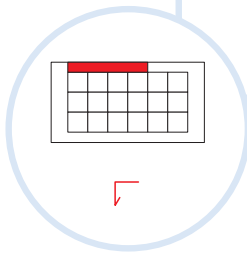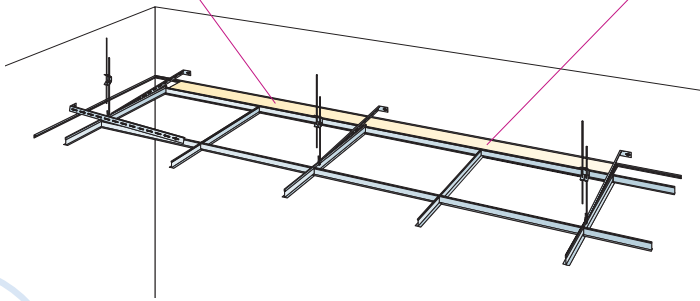


12

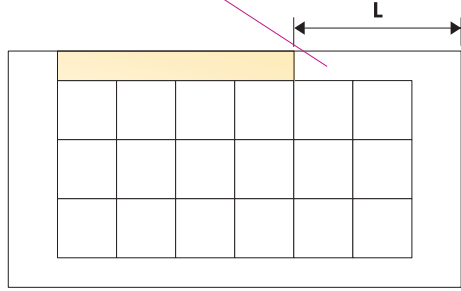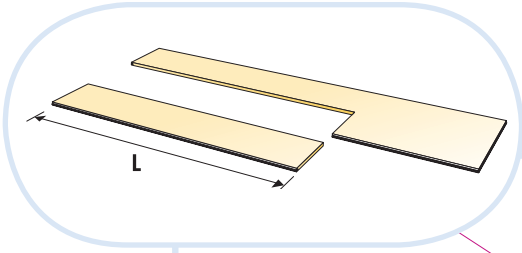



13

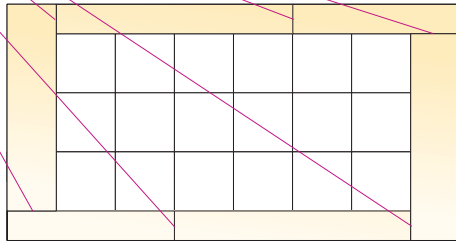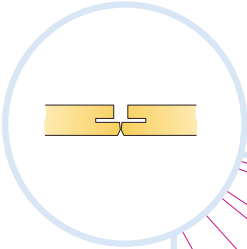







Focus A,E
Master A,E






14

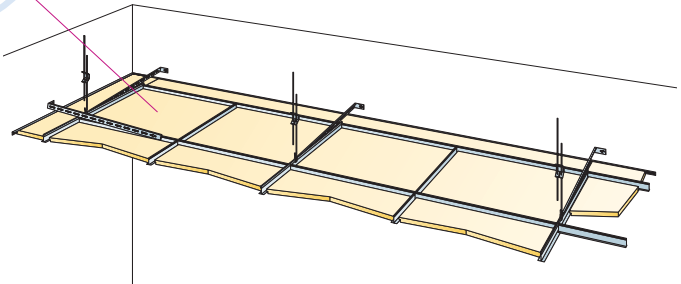

15

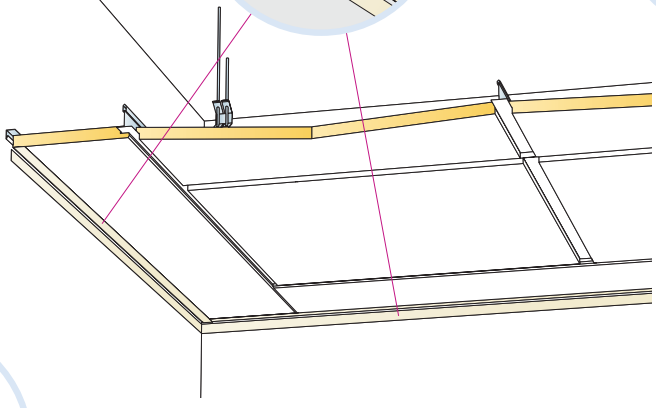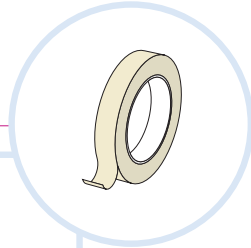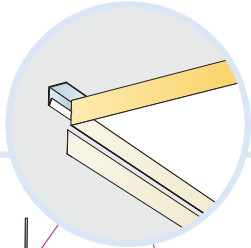

16

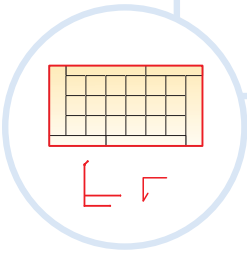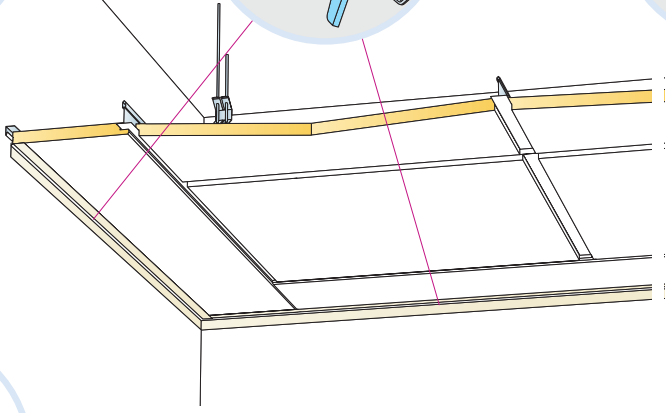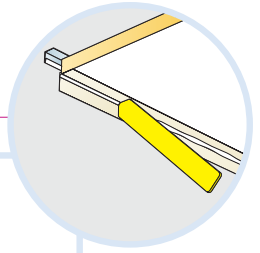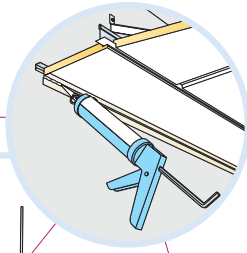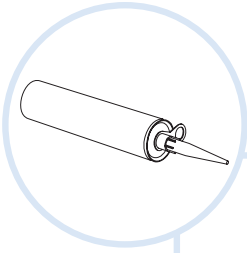

17

